

# Powerkit.68

By installing the **Powerkit.68 for the HDR.68**, the performance increases to over 20 joules. This depends on various factors such as outside temperature, CO<sup>2</sup> and ammunition.

**The possession of this accessory is allowed in Germany.  
However, installation is prohibited!**

## MANUAL

**ATTENTION: As soon as a technical change has been made to the weapon, this leads to a loss of guarantee and warranty.**

1. Open the cover of the gun so that the inner workings can be seen and is removable.
2. Carefully open the interior and remove the pressure housing.  
**ATTENTION:** Inside there are small springs etc., which like to jump out.
3. Remove the spring and bolt from the pressure housing.
4. Now you can remove the "golden" cap from the pressure housing open and take out the reducer "throttle".
5. The "golden" sealing cap must be put back into the pressure housing be used. The reducer "throttle" should no longer installed as this will affect performance.
6. Now set our tuning valve using the enclosed screw at the bottom of the pressure housing (small recess above the CO<sup>2</sup> capsule).
7. Then swap the valve pin in the bolt with our tuning pin out. **Tip:** For easier removal, briefly heat the bolt beforehand.
8. Now put the gun back together.